
## XP800

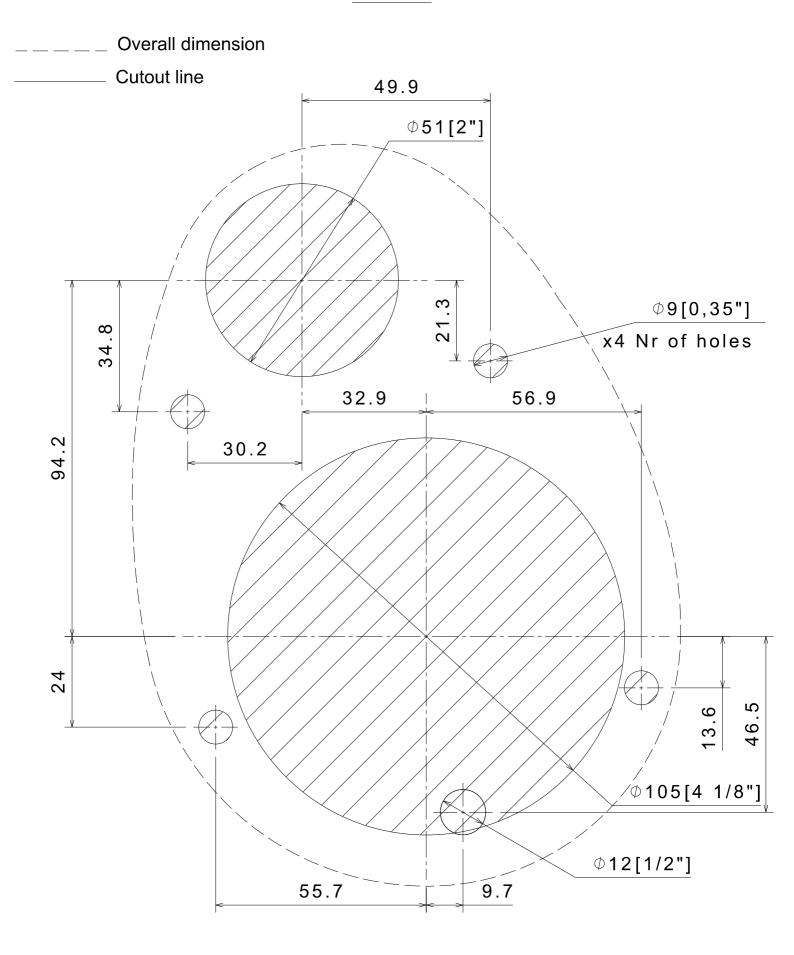

## **INSTRUCTIONS:**

- 1) WARNING!! Drawing should not be scaled. Prior to drilling, please verify the dimensions of the print out.
- 2) Drill  $\phi$ 12 first and then proceed with rest of the drillings